


## User Manual

Household use

\*Do not wash

### Face Shaver MXFS-100

Thank you for purchasing the Maxell product. Please carefully read this instruction manual before use and use it correctly.

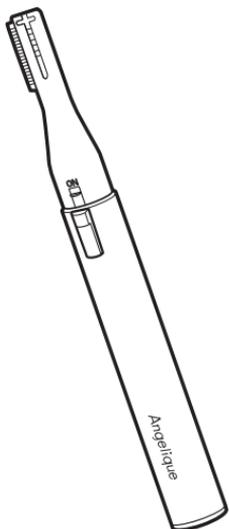

Contents	Page
<b>1</b> Introduction	2
<b>2</b> Preparation Before Use	2
<b>3</b> Part Names and Function	4
<b>4</b> Safety Precautions	5
<b>5</b> How to Use	7
<b>6</b> How to Replace the Blade and Maintain	10
<b>7</b> Storage Method	12
<b>8</b> Troubleshooting (When problems arise)	12
<b>9</b> Consumable Parts	12
<b>10</b> Specification	13

## **1** Introduction Keep the following in mind when reading the Instruction Manual.

- This Instruction Manual may be subject to change without prior notice.
- In order to improve the product, external appearance or part of the specifications may be subject to change without prior notice.
- Unauthorized duplication of part or all of this Instruction Manual without permission is prohibited except for the case of personal use. In addition, do not reprint this Instruction Manual without permission.

### **Disclaimer**

- Maxell shall not be responsible for any damage caused by fires, earthquakes, action of a third party, any accidents, intended or unintended misuse or other usage under abnormal conditions.
- We do not assume any responsibility for any collateral damages arising from the use or inability to use this product (loss of business profit, interruption of business).
- We do not assume any responsibility damage caused by any usage not described in the instruction manual.
- In regard to usage outside Japan, we do not accept any responsibility.
- Illustration is indicative; it may differ from the actual.

## **2** Preparation Before Use

### **How to insert batteries**

#### **Notes on using batteries**

1. Do not use a battery that is leaking.
2. Use only Alkaline batteries (AAA batteries).
  - If other types of batteries (such as rechargeable batteries) etc. are used, the power is likely to be insufficient or battery life is shortened and cannot fully perform its potential.
3. Please insert the battery correctly according to the indication on the main unit and align ⊕ and ⊖.
4. Use batteries within the recommended usage period.
5. Please remove used up batteries immediately.
6. Dispose used batteries according to the local regulations of your area.


- **Battery life is about 1 month.** (When using Maxell Alkaline Battery Voltage LR03 (T) twice a week for about 5 minutes each time)

※ Depending on the usage conditions such as hair thickness, strength of applied force to the skin, how the unit is maintained, ambient temperature, the number of usage times may be reduced.

- 1 **Remove batteries by pulling out the battery cover in the direction of the arrow.**

**Caution**


Do not hold the head part.

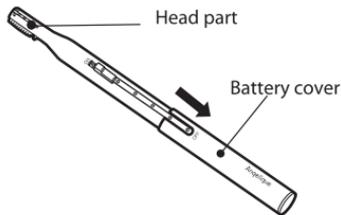


- 2 **Insert AAA alkaline battery (LR03) correctly according to the display on the main unit.**

**Caution**


If the direction of the battery is incorrect, it will not function.

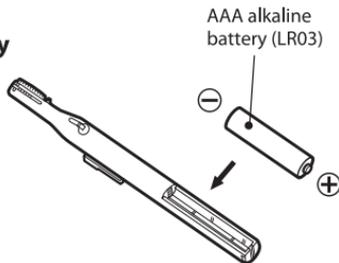

- 3 **Align the notch on the battery cover with the switch, firmly push the battery cover all the way in.**

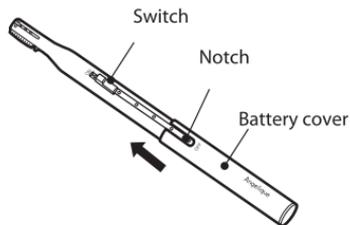

### 3 Part Names and Function

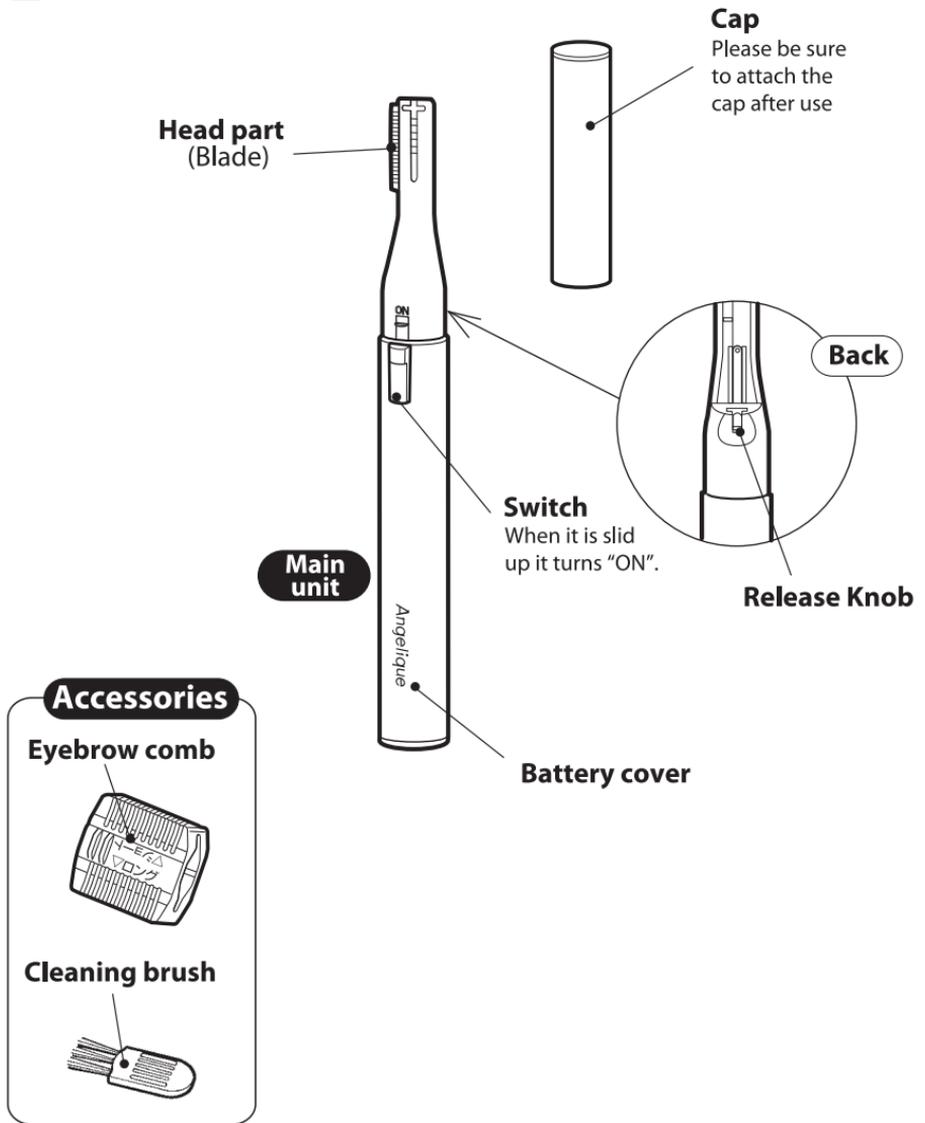

## 4 Safety Precautions Make sure to read the following

In this instruction manual, important items are stated in order to prevent harm to people who use it and other people, also loss and damage of property and to use it safely and correctly. Please read the text after understanding the following contents (display /figure symbols) and observe the items described.

### Explanation of Expression

Expressions	Meaning of Expressions
 <b>Warning</b>	Warning refers to misuse which might lead to death or serious injury*1.
 <b>Caution</b>	Caution refers to misuse which might lead to injury*2 and may cause property damage*3.

\*1: Serious injury means injury with after effects such as loss of sight, burns, electric shock, bone fracture or poisoning and injury which requires hospitalization or long-term hospital visits for medical treatment.

\*2: Slight injury means injury, burns, or electric shock which does not require hospitalization or long-term hospital visits for medical treatment.

\*3: Damage to property means consequential damage related to house, household goods and livestock or pets.

### Explanation of Symbols

Graphic symbols	Meaning of symbols
	<b>Prohibited</b>  This symbol signifies specific prohibitions in the handling of products. Pictures and sentences in or near the figure symbol indicate specific prohibited contents. (Example:  Disassembly prohibited)
	<b>Caution</b>  This symbol calls attention to ignition, electric shock, high temperature, etc. in the handling of products. Pictures indicate specific caution notes. (Example:  Electric shock warning)
	<b>Indication</b>  This symbol forces a user to perform an action based on the instruction in handling of the product. Specific content forced is shown in or near the symbol by picture or words. (Example:  Disconnect a plug from the outlet)

## **Warning**



Prohibited

- Do not use in a state where the blade is broken or deformed or the internal structure is exposed. (It may cause burns or accidents)
- Do not throw the main unit or batteries into the fire. (It may cause accidents or injury)
- Do not use near children or infants. (It may cause accidents or injury)
- Do not use while traveling in cars. (It may cause accidents)
- Do not allow children to use. Also keep it out of reach of infants. (It may cause burns or injury)



Prohibited

- People who are sensitive to make-up products, easy to develop razor burn, or people with allergies etc., should not use the device.  
(It may cause damage to the skin)
- Do not apply the blade to the part where there is acne or pimple.  
(It may cause damage to the skin)
- Do not press the blade hard against the skin.  
(It may cause damage to the skin)
- Do not share the usage of the device with family members or other people (unspecified number) or use for business purposes.  
(It may cause infection or malfunction)
- Do not drop or give strong impact.  
(It may cause injury or malfunction)



mandatory compliance

- Check the blade for damage or deformation before use.  
(It may cause damage to the skin)
- The device is for fine facial hair and eyebrows use only. Do not use for unwanted hair removal or hair on the head.  
(Hair may get caught or cause malfunction)
- Be sure to place the cap after use. (It may cause injury or malfunction)
- When there is people nearby, pay attention to the unexpected movement when use it. (It may cause injury)
- Failure to observe the following may cause injury or malfunction due to overheating, leakage or breakage of the battery.
  - Use correctly according to the usage indication of batteries.
  - Be sure to turn the switch "OFF" after use.
  - Check leaks periodically
  - If the device is not used for more than 1 month, remove the batteries.
  - Remove used up batteries immediately.



Keep dry

- Do not rinse with water. Do not soak in water or splash with water.  
(It may cause malfunction)



Prohibited to use in places subject to water

- Do not use or leave in places subject to water and humidity such as bathrooms.  
(It may cause malfunction or short circuit)



Prohibited to disassemble

- Do not remodel. Also, repair should be only carried out by repair technicians.  
(It may cause injury or malfunction)

## 5 How to Use

### Caution

- Check the blade for breakage or deformation before use.  
(It may cause damage to the skin)
- Do not press the blade hard against the skin.  
(It may cause damage to the skin)
- Do not use for unwanted hair removal or hair on the head.  
(Hair may get caught or cause malfunction)
- Do not use foundation, cream, soap etc. (If these become attached to the blade, it may interfere with the performance or cause malfunction)

**Please use it on bare skin.**

**If you are wearing make-up, be sure to wash your face and dry your skin before use.**


If your skin is moist, the blade may not slide smoothly and it will be difficult to shave.  
• If you are using for the first time, please try lightly in an inconspicuous area.

### Basic usage

- 1 Turn the switch "ON" and tilt the blade about 20° against your skin. Move it slowly in a direction against the flow of hair.

#### Caution

Please do not use with the blade at an angle more than 20°. (It may cause damage to your skin)

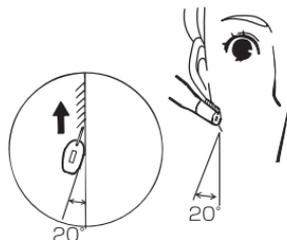


- 2 After use, turn the switch "OFF".

### Removing fine facial hair


#### Forehead, cheeks, chin

Lightly slide the blade against your skin, in a direction against the flow of hair to slowly shave.

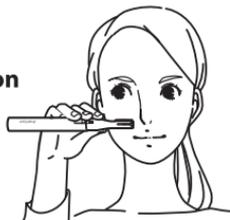

## ■ Hairline around the face and around the nostrils

Refer to the illustration on the right, shave in a way that is suitable for you.

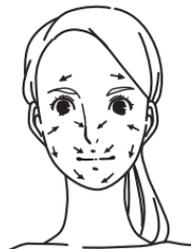

## ■ The hairline along the neck

Hold your hair with your hand so that you do not cut your hair and shave it like a safety razor.




## ■ Arms and legs

Start from the wrist to the elbow for arms and from the ankle to the knee for legs to shave slowly in the direction against the flow of hair.




## Eyebrow Shaping

Refer to the illustration on the right, prepare the outline of eye brows and shave in a way that is suitable for you.

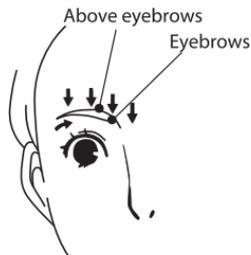


## How to use eyebrow comb

 The eyebrow comb is used when aligning the length of the eyebrows and cutting. The length of the eyebrows can be cut approximately 2mm and approximately 4mm.

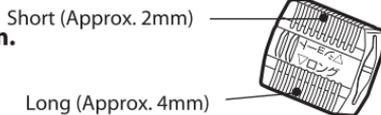


### 1 Turn the switch "OFF" and insert the blade until it clicks into the eyebrow comb.


- When cutting to 4mm, insert the blade into the "long" side of the eyebrow comb.
- When cutting to 2mm, insert the blade into the "short" side of the eyebrow comb.

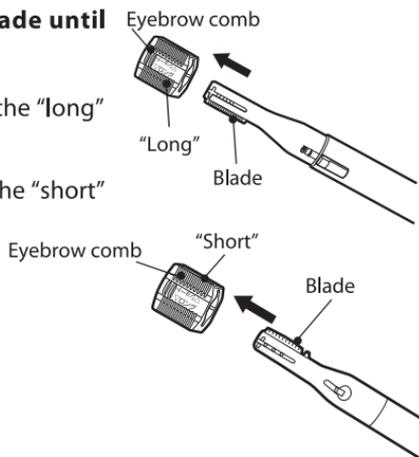

### 2 Turn the switch "ON" to align the eyebrow length.

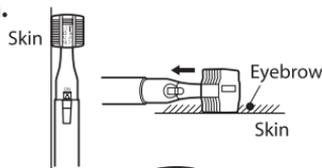

- Put the comb side of the eyebrow comb close against the skin, slowly move it from the outer corner of the eyebrows to the inner corner of the eyebrows in a direction against the flow of hair.

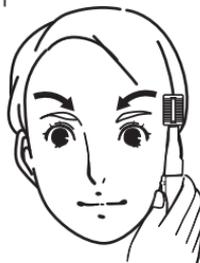

## 6 How to Replace the Blade and Maintain

### Caution


- Be sure to turn the switch "OFF" while cleaning. (It may cause injuries)
- Do not use other than shaver oil sold separately (It may cause skin troubles)
- Do not rinse with water. Also, do not leave it in a humid place such as a bathroom. (It may cause malfunction)
- Wipe off the dirt on the main unit with a wet cloth where squeezed water out. Do not use alcohol, benzine or thinner. (It may cause deformation or discoloration)

Please be sure to clean the device after use.


If only the cleaning brush is used to clean, sticky sebum and dirt may remain and cause the product stop functioning. Please use separately sold shaver oil.

### How to remove the blades

- 1 Slide the release knob in the direction of the arrow.

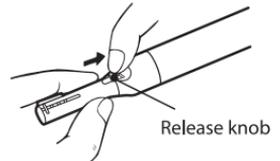


- 2 Remove the blade in the direction of the arrow.

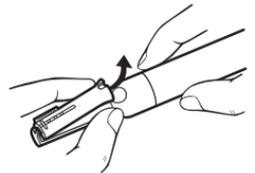

### Maintenance of the blade

- 1 Remove the hair attached to the blade and the main body with the cleaning brush.

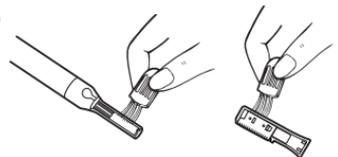


- 2** Apply separately sold shaver oil to the blade inner surface and allow it to run idly, and then wipe the surface of the blade and the main body.




## How to install the blades


- 1** If the release knob is in the locked position, slide the release knob in the direction of the arrow.

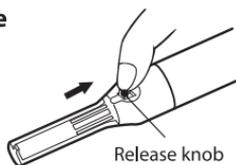


- 2** Insert the hole at the tip of the blade into the protrusion at the end of the main unit.

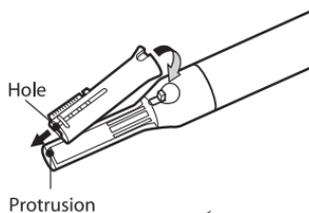

- 3** Lightly press the back of the blade against the main unit, slide the release knob in the direction of the arrow and mount it.

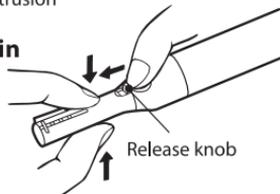

- 4** Place the cap

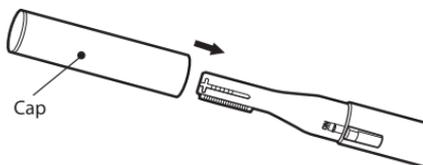

## 7 Storage Method

Replace the cap and store it in a place with little humidity and dust.

### Caution

- Do not leave in places subject to water or humidity. (It may cause malfunction)
- Do not leave it in direct sunlight (such as inside a car in the summer), or near heating appliances. (It may cause deformation or discoloration)

## 8 Troubleshooting (When problems arise)

Symptom	Where to check	How to fix
It does not work.	Is the battery inserted incorrectly?	Please check⊕and⊖, then insert the battery again.
	Is the blade dirty or rusting?	Please remove dirt and rust with separately sold shaver oil.
	Is the battery exhausted?	Please replace with a new alkaline battery.
The outcome is not good.	Is another type of battery that is not an alkaline battery used?	Please use alkaline batteries.
	The blade is dirty.	Please clean the blade.
	Is it the end of lifetime of the blade?	Please replace the blade.

## 9 Consumable Parts

We are preparing replacement blades

**The blade is a consumable item. Please replace with the optional replacement blade as soon as possible.**

As a guide for exchange,

When using twice a week (once for 5 minutes) and cleaning (see page 10 to 11).

• About a year and a half

**Please purchase at Maxell Online Rakuten Ichiba Store.**

Maxell Online

Search

<https://www.rakuten.ne.jp/gold/maxell/>

• MXFS-100Blade KM-L01

• Shaving Oil SP-01

## **10** Specification

Power	DC 1.5V AAA alkaline battery (LR03) 1pc
Weight	Approx. 30g (not including battery)

**Maxell, Ltd.**

30-13 Motoyoyogi-Cho, Shibuya-Ku, Tokyo 151-8527

<http://www.maxell.co.jp>