

 
User Manual

Household use

Eyelash curler

MXEL-100

Thank you for purchasing the Maxell product. Please carefully read this instruction manual before use and use it correctly.

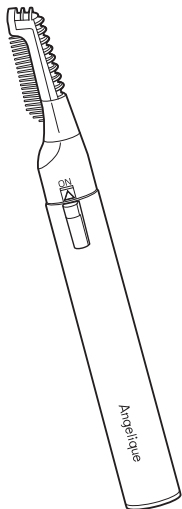

Contents	Page
1 Introduction	2
2 Preparation Before Use	2
3 Part Names and Function	5
4 Safety Precautions	6
5 Examples of Use	8
6 Maintenance	11
7 Storage Method	12
8 Troubleshooting (When problems arise)	12
9 Specification	13

1 Introduction Keep the following in mind when reading the Instruction Manual.

- This Instruction Manual may be subject to change without prior notice.
- In order to improve the product, external appearance or part of the specifications may be subject to change without prior notice.
- Unauthorized duplication of part or all of this Instruction Manual without permission is prohibited except for the case of personal use. In addition, do not reprint this Instruction Manual without permission.

Disclaimer

- Maxell shall not be responsible for any damage caused by fires, earthquakes, action of a third party, any accidents, intended or unintended misuse or other usage under abnormal conditions.
- We do not assume any responsibility for any collateral damages arising from the use or inability to use this product (loss of business profit, interruption of business).
- We do not assume any responsibility damage caused by any usage not described in the instruction manual.
- In regard to usage outside Japan, we do not accept any responsibility.
- Illustration is indicative; it may differ from the actual.

2 Preparation Before Use

How to insert batteries

Notes on using batteries

1. Do not use a battery that is leaking.
2. Use only Alkaline batteries (AAA batteries).
 - If other types of batteries (such as rechargeable batteries) etc. are used, the power is likely to be insufficient or battery life is shortened and cannot fully perform its potential.
3. Please insert the battery correctly according to the indication on the main unit and align ⊕ and ⊖.
4. Use batteries within the recommended usage period.
5. Please remove used up batteries immediately.
6. Dispose used batteries according to the local regulations of your area.

- **Battery life varies with ambient temperature.**

(When using Maxell Alkaline Battery Voltage LR03 (T) once a day for about 3 minutes each time)

 
- Approximately 2 weeks at ambient temperature 25°C.
- Approximately 1 week at ambient temperature 15°C.

Depending on usage conditions, such as low ambient temperature, the number of times of use is reduced.

- 1 **Remove batteries by pulling out the battery cover in the direction of the arrow.**

Caution


Do not hold the head part.

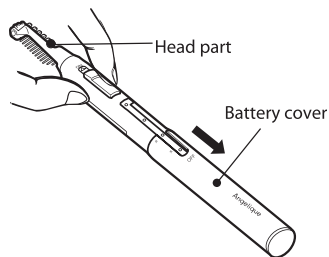


- 2 **Insert AAA alkaline battery (LR03) correctly according to the display on the main unit.**

Caution

 If the direction of the battery is incorrect, it will not function.

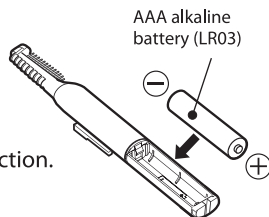

 - 3 **Align the notch on the battery cover with the switch, firmly push the battery cover all the way in.**

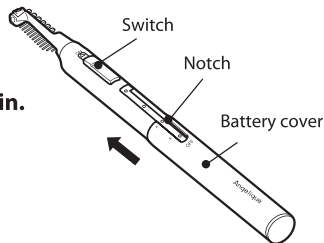

Before using

① Turn the switch "ON" and wait for the color of the optimum temperature mark to change.

The color changes in approximately 1 to 2 minutes.

Caution

Please use at an ambient temperature between 15°C~35°C.

 
If used at less than 15°C.

- It is difficult to curl.
- Battery life becomes shortened.
- The time to change the color of the optimum temperature mark becomes longer.

Please


If the color does not change after 2 minutes or more, please check that the battery is inserted correctly.

If it is correctly inserted, the battery may be depleted, so please replace them.

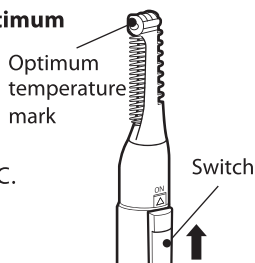

② When the optimum temperature mark changes from purple to pink, the device can be used.

 It may take time if the capacity of the battery is reduced or the ambient temperature is low.

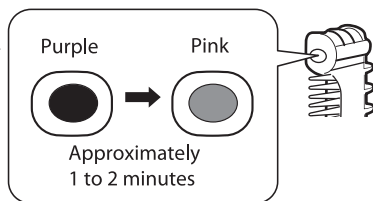

Point

It can be used when the color of the optimum temperature mark starts to change.

3 Name and function of each part

Cover

Please be sure to attach the cap after use



Optimum temperature mark

It will notify the optimum temperature by changing color.

Comb

It is used to smooth out eyelashes



Head part

Head part

It cannot be removed.

Guard

Switch

When it is slide up it turns "ON".

Battery cover



Main unit

Point heater

It is used to curl finer parts such as the lower eyelashes, outer corner of the eyes or inner corner of the eyes.

Main heater

It is used to curl eyelashes



Accessories



Cleaning brush



4 Safety Precautions Make sure to read the following

In this instruction manual, important items are stated in order to prevent harm to people who use it and other people, also loss and damage of property and to use it safely and correctly. Please read the text after understanding the following contents (display /figure symbols) and observe the items described.

Explanation of Expression










Expressions	Meaning of Expressions
 Warning	Warning refers to misuse which might lead to death or serious injury ^{*1} .
 Caution	Caution refers to misuse which might lead to injury ^{*2} and may cause property damage ^{*3} .

*1: Serious injury means injury with after effects such as loss of sight, burns, electric shock, bone fracture or poisoning and injury which requires hospitalization or long-term hospital visits for medical treatment.

*2: Slight injury means injury, burns, or electric shock which does not require hospitalization or long-term hospital visits for medical treatment.

*3: Damage to property means consequential damage related to house, household goods and livestock or pets.

Explanation of Symbols

Graphic symbols	Meaning of symbols
	Prohibited  This symbol signifies specific prohibitions in the handling of products. Pictures and sentences in or near the figure symbol indicate specific prohibited contents. (Example:  Disassembly prohibited)
	Caution  This symbol calls attention to ignition, electric shock, high temperature, etc. in the handling of products. Pictures indicate specific caution notes. (Example:  Electric shock warning)
	Indication  This symbol forces a user to perform an action based on the instruction in handling of the product. Specific content forced is shown in or near the symbol by picture or words. (Example:  Disconnect a plug from the outlet)

Warning



Prohibited

- Do not press the heater part against the eyelids. (It may cause burns or accidents)
- Do not use near children or infants. (It may cause accidents or injury)
- Do not use while traveling in cars. (It may cause accidents)
- Do not use if the comb/heater is damaged or deformed, or the internal structure is exposed. (It may cause accidents or injury)

Warning



Prohibited

- Do not throw the main unit or batteries into the fire.
(It may cause accidents or injury)
- Do not allow children to use. Also keep it out of reach of infants.
(It may cause burns or injury)

Warning



Prohibited

- Do not use for any other purposes than eyelash curling.
(It may cause accidents or malfunction)
- Do not use while wearing contact lenses.
(It may cause the lens to deform and damage the eyes.)
- Do not use if you are suffering from an eye disease.
(It may worsen symptoms)
- Do not share the usage of the device with family members or other people (unspecified number) or use for business purposes.
(It may cause infection or malfunction)
- Do not leave the switch on.
(It may cause fire or malfunction)
- Do not use on false eyelashes or eyelash extensions.
(It may cause damage to eyes due to deformation and deterioration of adhesive)



mandatory compliance

- Do not leave it on flammable materials such as vinyl and paper while the heater is hot. (It may cause fire or malfunction)
- Do not drop or subject to a strong impact.
(It may cause injury or malfunction)
- Before using, check the comb part of the head and the heater to see there is no deformation.
(It may cause injury or malfunction)
- Be sure to replace the cap after use.
(It may cause injury or malfunction)
- When around people, pay attention to unexpected movement whilst using it. (It may cause injury)
- If you feel abnormalities in eyes and eyelids during use or after use, stop using the device and consult a specialist.

Caution



mandatory compliance

- **Failure to observe the following may cause injury or malfunction due to overheating, leakage or explosion of the battery.**
 - Use correctly according to the usage indication of batteries.
 - Be sure to turn the switch "OFF" after use.
 - Check leaks periodically
 - If the device is not used for more than 1 month, remove the battery.
 - Remove used up batteries immediately.



Keep dry

- **Do not rinse with water. Do not soak in water or splash with water. (It may cause malfunction)**



Prohibited to use in places subject to water

- **Do not use or leave in places subject to water and humidity such as bathrooms. (It may cause malfunction or short circuit)**



Prohibited to disassemble

- **Do not remodel. Also, repair should be only carried out by repair technicians. (It may cause injury or malfunction)**

5 **How to use**

Warning

- **Do not press the heater part against the eyelid, as it becomes hot. (It may cause burns or accidents)**

Caution

- **If you feel abnormalities in eyes and eyelids during use or after use, stop using the device and consult a specialist.**
- **Do not touch the head part after use, as it is hot. (It may cause burns or accidents)**
- **Be sure to replace the cap after use. (It may cause injury or malfunction)**
- **If the device is not used for more than 1 month, remove the battery. (It may cause malfunction)**
- **Be careful not to put a comb into the eyes. (It may cause injury)**

 
Please

- Use the device while checking with a mirror so as not to hurt your eyes.
- When the heater part touches the skin and feels hot, cool the skin with water.
- If mascara is attached to the heater part or comb, clean it before use.

Curl eyelashes


1 Raise the root with the main heater.

Place the eyelashes on the main heater part, rotate 90° outward to be parallel to the eyelid, and then hold for about 3 seconds.

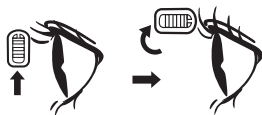

2 Curl the tip of the eyelashes with the main heater.

 Move the head part slowly to the tip of the eyelashes gently and form a curl, and then hold for about 3 seconds.

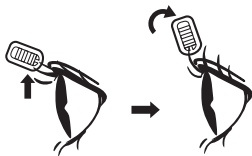

3 Use the main heater to adjust the flow of the lower lashes.

 
Place the main heater vertically against the lower eyelashes, move slowly downward from the root and hold it at the tip of the eyelashes for 3 seconds.



Outer corner of eyes

4 Curl the upper and lower outer corner and inner corner of the eyes with the point heater.


Keep the point heater parallel to the eyelid and hold for about 3 seconds, then slowly move from the root to the tip of the eyelashes.

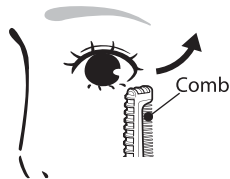

Inner corner of eyes

Caution

 To prevent the comb from getting into the eyes, the comb is outside for the outer corner of the eyes and inside for the inner corner of the eyes.

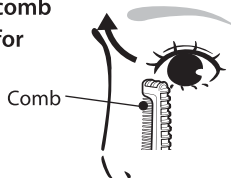


After use

- 1 Turn the switch "OFF" and after letting it cool, replace the cap.

Tips to achieve beautiful curl

 - 1 When curling the upper eyelashes, hold the mirror at a position below the eye line, and when curling the lower eyelashes, hold the mirror at a position above the eye line to make the eyelashes look better and make it easier to curl.
- 2 Practice use without turning the switch "ON" until you get used to it.
- 3 Use the main heater for the center of the upper and lower eyelashes, and use the point heater for the inner and outer corners of the eyelashes.
- 4 When the heater is applied to the root of eyelashes it makes it easier to form beautiful curl.

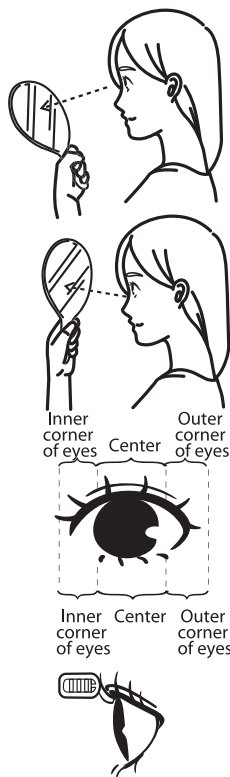

Caution

- Do not press the heater part against the eyelid.
(It may cause burns or accidents)

Better way of use

- 1 Apply mascara after curling the eyelashes; apply the heater part after a little while to make a firm finish.

Caution

- If you feel abnormalities in the eyes and eyelids during use or after use, stop using the device and consult a specialist.

- 2 Separate eyelashes by removing extra mascara with a comb.

Move the comb slowly from the root of the eyelashes towards the tips of the eyelashes before the mascara dries.



Caution

- Be careful not to put the comb in the eyes. (It may cause injury)
- Move slowly and carefully so that fibers and removed mascara do not get into eyes when combing.
(If combed with strong force, it may cause damage to eyelashes or cause injury)

6 Maintenance

 
Caution

- Be sure to turn the switch "OFF" while cleaning. (It may cause burns.)
- Do not wash with water. Also, do not soak in water or splash with water. (It may cause malfunction)
- Wipe off the dirt on the main unit with a cloth firmly squeezed with water. Do not use alcohol, benzine or thinner.
(It may cause deformation or discoloration.)

1 Remove the dirt from the head.

(The head part cannot be removed.)

- For grime such as mascara attached to the heater part and the comb, use the cleaning brush included in the product.

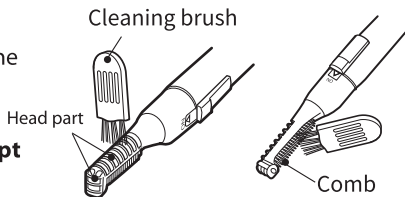

2 Wipe off the dirt on the main unit except for the head with a cloth containing diluted neutral detergent liquid.

7 Storage Method

Replace the cap and store it in a place with little humidity and dust.

Caution

- Do not leave in places subject to water or humidity. (It may cause malfunction.)
- Do not leave it in direct sunlight (such as inside a car in the summer), or near heating appliances. (It may cause deformation or discoloration.)

8 Troubleshooting (When problems arise)

Symptom	Where to check	How to fix
It will not get warm. (The color of the optimum temperature mark does not change.)	Is the battery inserted incorrectly?	Please check ⊕ and ⊖, then insert the battery again.
	Is the battery exhausted?	Please replace with a new alkaline battery.
It takes time to change the color of the optimum temperature mark. Or it takes time to get warm.	Ambient temperature is low.	When the ambient temperature is low, it takes time to warm up the heater, and the life of the battery becomes reduced. It is recommended to use at room temperature above 15°C.
	Is another type of battery that is not an alkaline battery used?	Please use alkaline batteries.
Abnormally hot.		
It has become difficult to curl.	Is the heater part dirty with mascara etc.?	Please clean the heater part.

9 Specification

Power	DC 1.5V AAA alkaline battery (LR03) 1pc
Weight	Approx. 30g (not including battery)

Maxell, Ltd.

30-13 Motoyoyogi-Cho, Shibuya-Ku, Tokyo 151-8527

<http://www.maxell.co.jp>