

## User Manual

 
Household use

\*Do not wash

Nose Trimmer

### MXNS-100

Thank you for purchasing the Maxell product. Please carefully read this instruction manual before use and use it correctly.

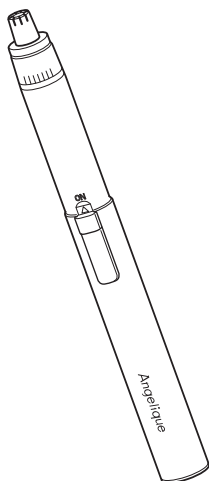

Contents	Page
<b>1</b> Introduction	2
<b>2</b> Preparation Before Use	2
<b>3</b> Part Names and Function	4
<b>4</b> Safety Precautions	5
<b>5</b> How to Use	7
<b>6</b> How to Replace the Blade and Maintain	8
<b>7</b> Storage Method	10
<b>8</b> Troubleshooting (When problems arise)	10
<b>9</b> Consumable Parts	10
<b>10</b> Specification	11

## **1 Introduction** Keep the following in mind when reading the Instruction Manual.

- This Instruction Manual may be subject to change without prior notice.
- In order to improve the product, external appearance or part of the specifications may be subject to change without prior notice.
- Unauthorized duplication of part or all of this Instruction Manual without permission is prohibited except for the case of personal use. In addition, do not reprint this Instruction Manual without permission.

### **Disclaimer**

- Maxell shall not be responsible for any damage caused by fires, earthquakes, action of a third party, any accidents, intended or unintended misuse or other usage under abnormal conditions.
- We do not assume any responsibility for any collateral damages arising from the use or inability to use this product (loss of business profit, interruption of business).
- We do not assume any responsibility damage caused by any usage not described in the instruction manual.
- In regard to usage outside Japan, we do not accept any responsibility.
- Illustration is indicative; it may differ from the actual.

## **2 Preparation Before Use**

### **How to insert batteries**

#### **Notes on using batteries**

1. Do not use a battery that is leaking.
2. Use only Alkaline batteries (AAA batteries).
  - If other types of batteries (such as rechargeable batteries) etc. are used, the power is likely to be insufficient or battery life is shortened and cannot fully perform its potential.
3. Please insert the battery correctly according to the indication on the main unit and align⊕ and ⊖.
4. Use batteries within the recommended usage period.
5. Please remove used up batteries immediately.
6. Dispose used batteries according to the local regulations of your area.

 
- **Battery life is about 1 year.** (When using Maxell Alkaline Battery Voltage LR03 (T) once a week for about 90 second each time)

※ Depending on the usage conditions such as hair thickness, strength of applied force to the skin, how the unit is maintained, ambient temperature, the number of usage times may be reduced.

- 1 **Remove batteries by pulling out the battery cover in the direction of the arrow.**

**Caution**


Do not hold the head part.

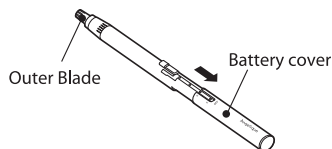


- 2 **Insert AAA alkaline battery (LR03) correctly according to the display on the main unit.**

**Caution**

 
If the direction of the battery is incorrect, it will not function.

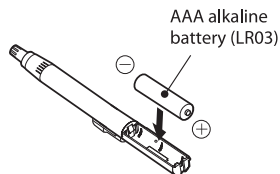

 - 3 **Align the notch on the battery cover with the switch, firmly push the battery cover all the way in.**

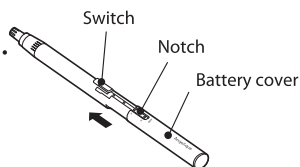

### 3 Part Names and Function

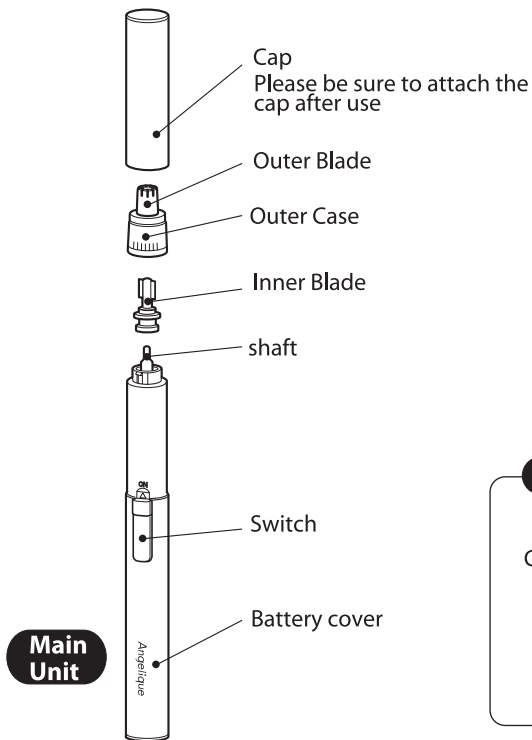 

#### Accessories



Cleaning brush



## 4 Safety Precautions Make sure to read the following

In this instruction manual, important items are stated in order to prevent harm to people who use it and other people, also loss and damage of property and to use it safely and correctly. Please read the text after understanding the following contents (display /figure symbols) and observe the items described.

### Explanation of Expression










Expressions	Meaning of Expressions
 <b>Warning</b>	Warning refers to misuse which might lead to death or serious injury <sup>*1</sup> .
 <b>Caution</b>	Caution refers to misuse which might lead to injury <sup>*2</sup> and may cause property damage <sup>*3</sup> .

<sup>\*1</sup>: Serious injury means injury with after effects such as loss of sight, burns, electric shock, bone fracture or poisoning and injury which requires hospitalization or long-term hospital visits for medical treatment.

<sup>\*2</sup>: Slight injury means injury, burns, or electric shock which does not require hospitalization or long-term hospital visits for medical treatment.

<sup>\*3</sup>: Damage to property means consequential damage related to house, household goods and livestock or pets.

### Explanation of Symbols

Graphic symbols	Meaning of symbols
	<b>Prohibited</b>  This symbol signifies specific prohibitions in the handling of products. Pictures and sentences in or near the figure symbol indicate specific prohibited contents. (Example:  Disassembly prohibited)
	<b>Caution</b>  This symbol calls attention to ignition, electric shock, high temperature, etc. in the handling of products. Pictures indicate specific caution notes. (Example:  Electric shock warning)
	<b>Indication</b>  This symbol forces a user to perform an action based on the instruction in handling of the product. Specific content forced is shown in or near the symbol by picture or words. (Example:  Disconnect a plug from the outlet.)

## Warning



Prohibited

- Do not insert beyond the outer blade (corrugated groove) into the nostrils. (It may cause damage to your skin)
- Do not use near children or infants. (It may cause accidents or injury)
- Do not use while traveling in cars. (It may cause accidents.)
- Do not throw the main unit or batteries into the fire. (It may cause accidents or injury.)
- Do not allow children to use. Also keep it out of reach of infants. (It may cause burns or injury.)



Prohibited

- People who are easy to develop razor burn, or people with allergies etc., should not use the device.  
(It may cause damage to the skin.)
- Do not press the blade hard against the nose.  
(It may cause damage to the skin.)
- Do not share the usage of the device with family members or other people (unspecified number) or use for business purposes.  
(It may cause infection or malfunction.)
- Do not drop or give strong impact.  
(It may cause injury or malfunction.)
- Since the blade is finished precisely, it does not give a shock.  
(It may cause injury or malfunction.)



mandatory  
compliance

- Check the blade for breakage or deformation before use.  
(It may cause damage to your skin)
- It is for nose hair use only. Do not use for any other purposes.  
(It may cause injury or malfunction)
- Be sure to cover with the cap after use.  
(It may cause injury or malfunction)
- When there is people nearby, pay attention to the unexpected movement when use it.
- Failure to observe the following may cause injury or malfunction due to overheating, leakage or explosion of the battery.
  - Use correctly according to the usage indication of batteries.
  - Be sure to turn the switch "OFF" after use.
  - Check leaks periodically
  - If the device is not used for more than 1 month, remove the batteries.
  - Remove used up batteries immediately.



Keep dry

- Do not rinse with water. Do not soak in water or splash with water.  
(It may cause malfunction)



Prohibited to  
use in places  
subject to water

- Do not use or leave in places subject to water and humidity such as bathrooms.  
(It may cause malfunction or short circuit)



Prohibited to  
disassemble

 
- Do not remodel. Also, repair should be only carried out by repair technicians.  
(It may cause injury or malfunction)

## 5 How to Use

### Caution

- Check the blade for breakage or deformation before use.
- Do not press the blade hard against the nostrils.

- ❶ Remove the cap and turn on the switch.

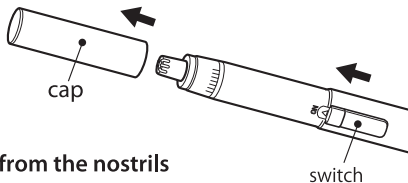

- ❷ Cut only the nose hair in the range visible from the nostrils by slowly putting the outer blades into the nostrils.

### Caution

Do not press the blade hard against the nostrils.



- ❸ Be sure to turn off the switch after use.

## 6 How to Replace the Blade and Maintain

### Caution

- Be sure to turn the switch “OFF” while cleaning.
- Do not use other than shaver oil sold separately.
- Do not rinse with water. Do not soak in water or splash with water.

Wipe off the dirt on the main unit with a wet cloth where squeezed water out. Do not use alcohol, benzine or thinner.

Please be sure to clean the device after use.

If only the cleaning brush is used to clean, sticky sebum and dirt may remain and cause the product stop functioning. Please use separately sold shaver oil.

### How to remove the blades

 
- 1 Turn off the switch, turn the outer blade in the direction of the arrow and remove the outer blade.



- 2 Carefully remove the inner blade from the outer blade.


When it is pressed from the tip of the outer blade with a pointed object, it will be easily disconnected.

It can be removed easily by hooking the shaft on the protrusion of the inner blade.

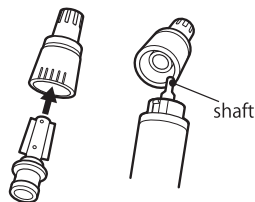

### Maintenance of the blade

 
Use the attached cleaning brush to remove the hair and dirt on the outer blade, outer blade case, inner blade and the main unit.

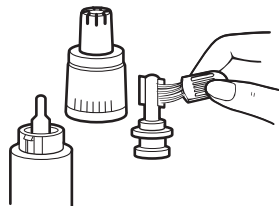



## ■ Washing with water

 - 1 Rinse off the dirt from the tip of the outer blade and the inner blade with water.
- 2 After wiping off moisture with a towel or tissue etc., then let it dry naturally.

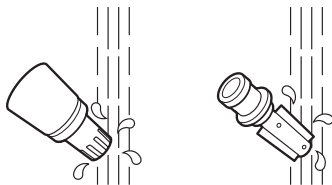


### Caution

- Do not wash the main unit with water.
- Do not touch the edge of the inner blade (It may cause injury).

## How to install the blades


- 1 Install the inner blade to the outer blade case.

 Insert the inner blade straight.

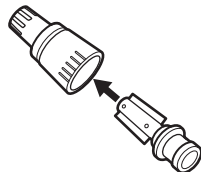


- 2 Attach the outer blade case to the main unit.

 Apply separately sold shaver oil to the blade surface and allow it to run idly, then wipe the surface of the blade.

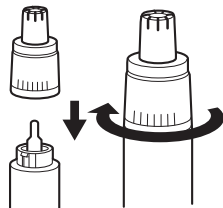

- 3 Cover with the cap.

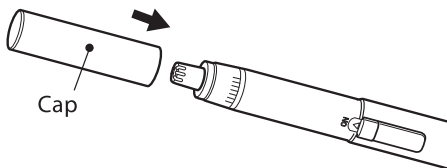 

## 7 Storage Method

Replace the cap and store it in a place with little humidity and dust.

### Caution

- Do not leave in places subject to water or humidity. (It may cause malfunction.)
- Do not leave it in direct sunlight (such as inside a car in the summer), or near heating appliances. (It may cause deformation or discoloration.)

## 8 Troubleshooting (When problems arise)

Symptom	Where to check	How to fix
It does not work.	Is the battery inserted incorrectly?	Please check⊕and⊖, then insert the battery again.
	Is the blade dirty or rusting?	Please remove dirt and rust with separately sold shaver oil.
	Is the battery exhausted?	Please replace with a new alkaline battery.
The finish is not good.	Is another type of battery that is not an alkaline battery used?	Please use alkaline batteries.
	The blade is dirty.	Please clean the blade.

## 9 Consumable Parts

We are preparing replacement blades

**The blade is a consumable item. Please replace with the optional replacement blade as soon as possible.**

As a guide for exchange,

When using once a week (once for 90 seconds) and cleaning (see page 8 to 9).

• **About a year and a half**

**Please purchase at Maxell Online Rakuten Ichiba Store.**

Maxell Online

Search

<https://www.rakuten.ne.jp/gold/maxell/>

- **MXNS-100Blade**    **KM-C02**
- **Shaving Oil**        **SP-01**

## **10** Specification

Power	DC 1.5V   AAA alkaline battery (LR03) 1pc
Weight	Approx. 50g (not including battery)

**Maxell, Ltd.**

30-13 Motoyoyogi-Cho, Shibuya-Ku, Tokyo 151-8527

[\*\*http://www.maxell.co.jp\*\*](http://www.maxell.co.jp)